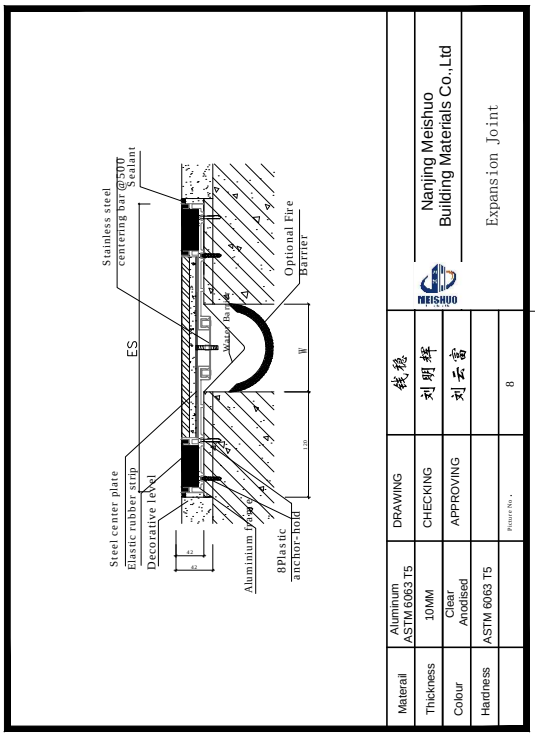

1. Clean the garbage and check if the gap is equally wide and straight.

2.Make level

3. Make level with high strength of cement mortar. The width is more than 150mm.

4.Install the fire barrier. Then Snap the ink line on the screed coat to confirm the sidelines of the aluminum base.

5.Install the water barrier. The side line of water barrier can't cover the ink line snapped.(Brush the special glue on the surface of the screed coat and the lower surface of the water barrier. After the glue is almost air drying, put the water barrier on the screed coat.)

6.Install the aluminum base,and make sure the aluminium base is straight.

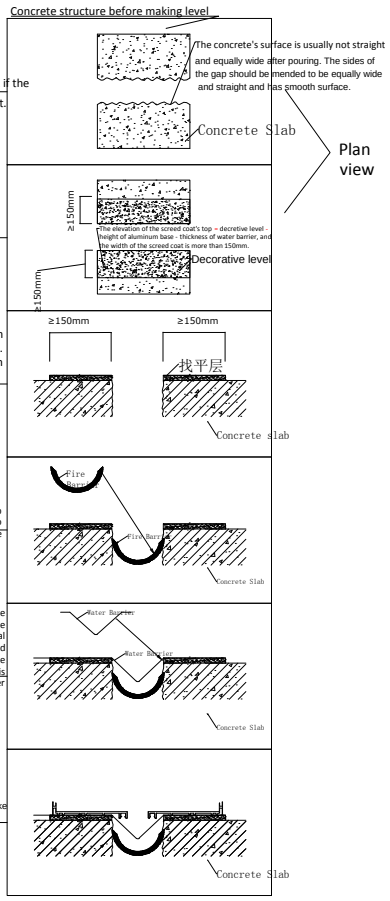

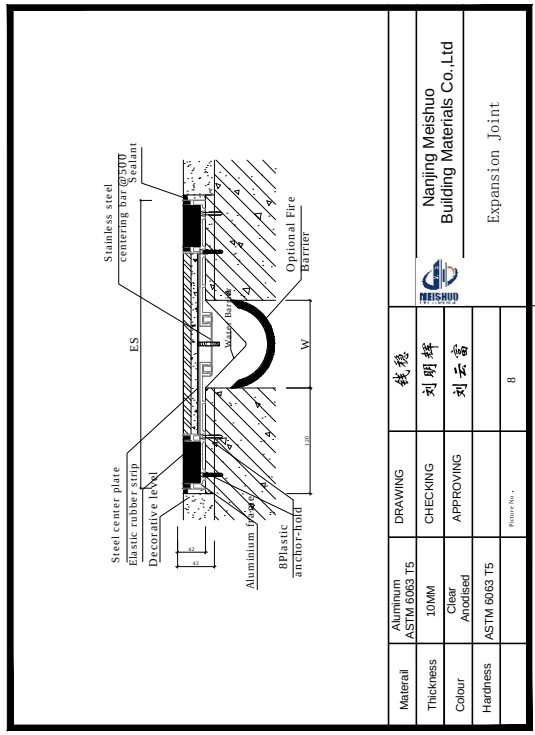

7.Nail the scree to make sure the base in on a straight line. Or when the centering bar bolt is screwed down, the aluminum plate must be mismatched.

8. Make the Decorative level to make sure it has the same elevation with the aluminum base. And fill with sealant to make sure the aluminum base and decorative level to connect tightly and won't leak.

9.Install the centering bar and lean it as 45°with the aluminum base. Place the plate on the aluminium frame first. According to the screw hole of the aluminum palte,confirm the location of the centering bar screw. Sign on the decorative level , and take off the plate, then place the centering bar according to the sign.

10.Install the plate. Connect the plate with centering bar by screws from one side to the other, based on the holes on the centering bar,

11.Make sure the devorative level on the center plate is well provided.
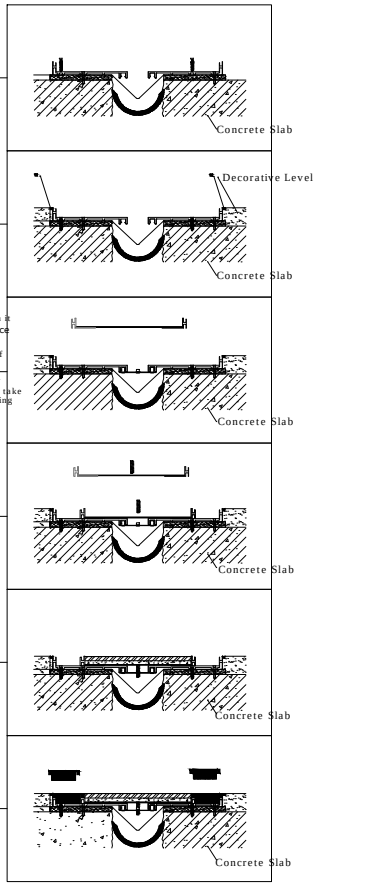
12.Install the elastic rubber strip, and finish installation.